
## FS Series Pitch Adjustment

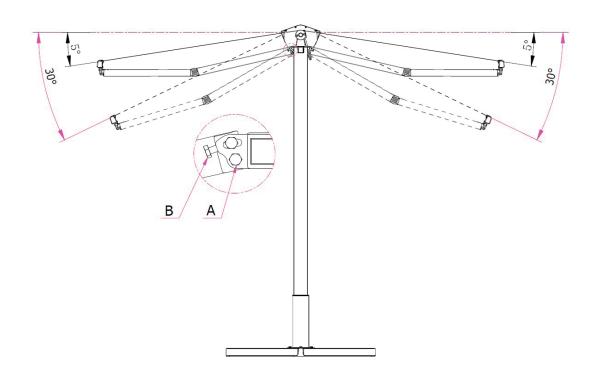

- ① Open the awning to about 1/2 projection.
- ② With a helper supporting the front bar, loosen the Screw A to 1/2 turn.
  - Do not loosen or remove the Screw A completely.
- 3 Adjust the Screw B to raise or lower the front bar.
  - a. Turn Screw B to the right (clockwise) to raise the front bar.
  - b. Turn Screw B to the left (counter clockwise) to lower the front bar.
- (4) Make sure the front bar is level.
- 5 Tighten the Screw A.
- 6 Repeat for the other arm.





Our team prides itself on quality in product and service. Should you have any concerns or questions, do not hesitate to reach us at **service@advaning.com**.