


Advaning's All-Weather Awning Cover helps keep your awning investment safe from unnecessary exposure to the weather elements when not in use.

We know that every installation is not the same, and have provided you with this simple bracket cutout template to customize our cover to best fit your awning installation.

**Reminder:** Customization of the awning cover will void the warranty.


### BRACKET CUSTOMIZATION INSTRUCTIONS

This bracket template is made for Advaning Dual-Use Wall/Ceiling Brackets. You may modify the bracket template to your specific awning's bracket type/style/thickness/width.

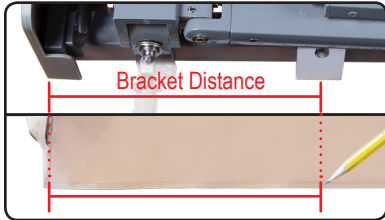

**Step 1.** Measure the distance from the edge of the awning to the center of each bracket. Mark the distance of your bracket placements with a pencil on the inside of the awning cover's edge.

*\*If your bracket placement corresponds to the awning cover strap/s location, you can opt to continue with the process. Please note that you will be removing that strap from the cover.*

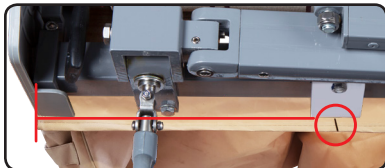

**Step 2.** Place the cover against the awning to ensure that your markings align with the brackets, and make any necessary adjustments to your markings if needed.



**Step 3.** Cut the Bracket Template (paper) along the dotted lines.



**Step 4.** Align the center of the bracket template to your pencil markings and the edge of the cover. Trace the Bracket Template shape with a pencil onto the inside of the cover (repeat as needed for all brackets).



**Step 5.** Cut your tracings out from the cover and fit the cover over your awning.



**Step 6.** Use an all-weather outdoor adhesive on the seam edges to prevent fraying.

