


# Retractable Awning Header Board Guide

## NOTICE


- This is a general guide simplified for illustrative purposes only.
- Advaning highly recommends consulting with a professional installer whenever an installation deviates from the Owner's Manual.
- Always consult with a hardware or contractor professional for appropriate hardware and installation for your specific header installation.
- For optimal balance of the awning's weight distribution, please follow the bracket placement illustration in the Owner's Manual for your size awning.

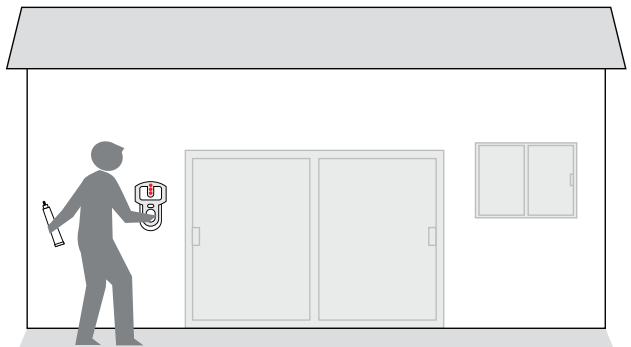

1.

### Locate, Measure & Mark Your Stud Locations.


- Tools Needed:  
Stud Finder, Measuring Tape, Pencil/Marker  
Hardware, Level, Powerdrill, Ladders

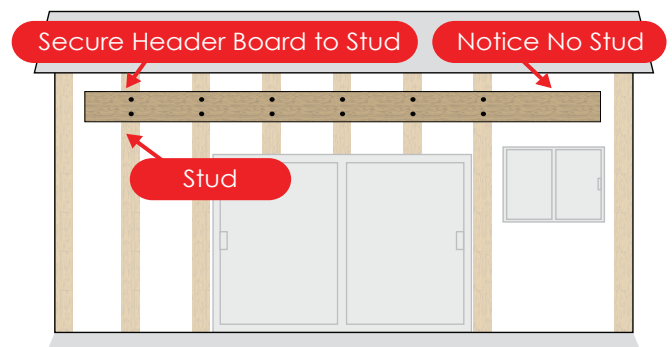

2.

### Secure Header Board to Studs.


- Recommended:  
2x6 ~ 2x8 Size Lumber (weather stable)

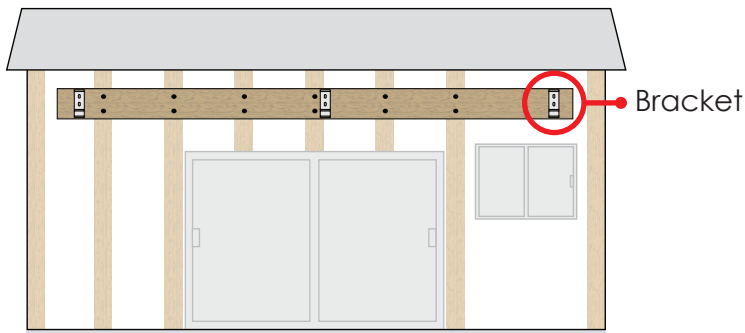

3.

### Install Advaning Brackets onto Header Board.

- Tip:  
Avoid placing/overlapping bracket onto header connection hardware.

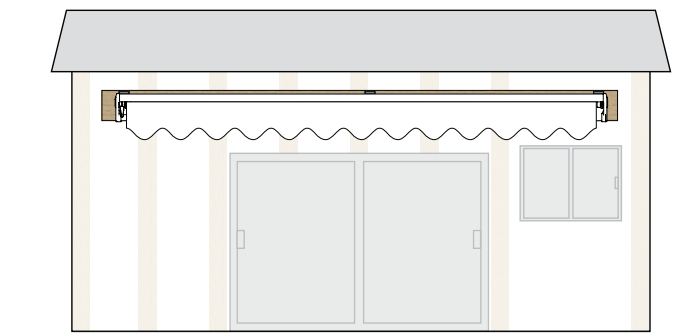

4.

### Secure Advaning Awning Following Owner's Manual Installation Steps.