

Wall Pre-Installation Measuring Guide

For Prestige Series Full Cassette Retractable Awning

ADVANING®

NOTE: Installation Guide is generalized for **most** types of installations and is intended to help plan for simple & easy installation & product usage. Personal & specific structural physicalities may require deviation from the recommended measurements. Plan for the front bar to pitch downward at a minimum of 12.5 inches from the installation height.

Example: Install height = 8 ft., therefore the front bar will be 7 ft. 6 inches from the ground.

Planning Your Awning Installation Height & Location.

Locate an area that is

- A** Recommended 8 to 10 ft. above the ground/floor/deck etc.
- B** Critical Minimum of 10 inches clear vertical run length, depending on awning size.


Note: Prestige Series bracket is 6" tall. Extra 4" provide working space for installation and maintenance.




Run length should be free & clear of any obstructions along the entirety of planned awning length.

Advaning highly recommends consulting with a professional installer/contractor who can best assess your specific installation challenges to avoid possible injury, property damage and ensure full product functionality.

CAUTION

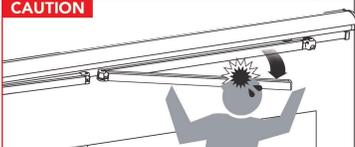

The awning arms contain tensioned cables. Always use caution, securely tie the awnings arms to the awning when performing installation, adjustments, or repairs. Sudden movement of tension arms can result in serious personal injury, product and/or property damage.

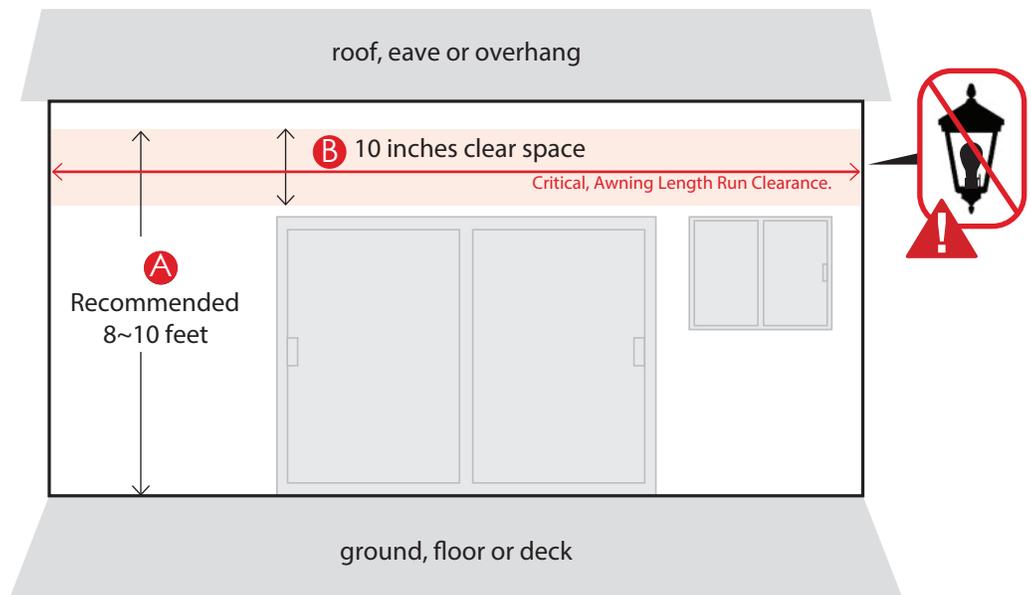

Personal & specific structural physicalities may require deviation from the recommended measurements.

Side view

